

clearaudio Charisma V2 MM



Loving music

User manual
Bedienungsanleitung



User manual / Bedienungsanleitung



User manual 2 – 11



Bedienungsanleitung 12 - 21

Dear audio enthusiast,

each component part that makes up a **Clearaudio** V2 MM cartridge is measured analysed and hand-selected, as is the final, completed cartridge. Every cartridge is 100% “Made in Germany” by **Clearaudio’s** own dedicated in-house team, thus ensuring its uniqueness and quality.

From the concept V2 to the Maestro V2, our MM cartridges have long been at the forefront of the moving magnet field and have proved popular among music lovers for their distinctive high quality.

The *Charisma V2* is the new flagship of the **Clearaudio** MM cartridge range. Only the finest materials qualified for inclusion, including the same diamond-coated Boron cantilever found in our world-leading Goldfinger Statement MC cartridge.

The use of highly efficient magnets gives the dynamic *Charisma V2* an almost record-breaking output, easily enough to amply drive less sensitive phono stages.

The double-polished diamond stylus is mounted on the cantilever with matchless precision, ensuring excellent frequency response and the highest channel separation. The cartridge body is made from the finest ebony wood and is set with a German silver inlay.



Loving music

User manual / Bedienungsanleitung

Please note:

This user manual gives you valuable information for the correct installation of your cartridge. For fine adjustment, however, we can only provide general guidelines, since the optimal adjustment depend primarily on your specific tonearm and turntable.

Many thanks again for choosing **Clearaudio**.

We wish you much musical enjoyment with your new *Charisma V2 MM* cartridge.

Clearaudio electronic GmbH

CAUTION:

NOT SUITABLE FOR SHELLAC RECORDS (78rpm).

This phono cartridge is only for mounting on tonearms and must not be used for other purposes.

Contents

1. Included accessories	5
2. Mounting procedure	6 - 7
3. Adjustment of the tracking force	8
4. Special instructions	9 - 10
5. Technical data	11
Warranty information.....	22 - 23



Loving music

User manual / Bedienungsanleitung

1. Included accessories

- Allen key 2mm
- Cartridge mounting screws (2pcs. M2.5 x 10mm; 2 pcs. M2.5 x 8mm)
- User manual

Additional analogue accessories are available at: www.analogshop.de

The following are recommended:

- **Clearaudio** *Test Record* (Art. No. LP43033)
- **Clearaudio** *Break-In Test Record* (Art. No. BIN070904)
- **Clearaudio** *Setting Template* (Art. No. AC005/IEC).
- **Clearaudio** *Stylus Gauge* (Art. No. AC094)
- **Clearaudio** *Weight Watcher touch* (Art. No. AC163)
- **Clearaudio** *Elixir of Sound* (Art. No. AC003)
- **Clearaudio** *Diamond cleaner brush* (Art. No. AC014)


2. Mounting procedure

Take the cartridge out of the packaging. To avoid damage, we recommend leaving the stylus guard on the cartridge while mounting the cartridge onto the tonearm.

Use the screws provided to mount your **Clearaudio** *Charisma V2 MM* cartridge (the cartridge threads in the body comply with the metric standard for M 2.5mm screws and have the standard spacing of 12.7mm). **Be careful not to over-tighten the screws as they may strip the threaded holes.**

Now connect the pins of your **Clearaudio** cartridge to the jacks of the headshell or tonearm cable, taking care not to use too much force. If necessary, you can use suitable precision pliers or tweezers for assistance.

Please note the colour coding below in order to ensure the correct phase in music playback, otherwise an audible sound deterioration would result.

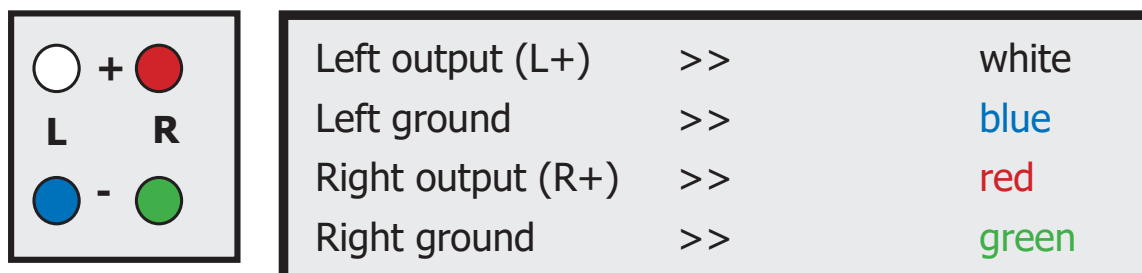

Pic. 1: Colour marking of the signal pins



Loving music

User manual / Bedienungsanleitung

We recommend the following order of assembly:

- 1. Mount the *Charisma V2* MM cartridge into the tonearm.**
- 2. Connect the tonearm or turntable ground with the preamplifier ground (before plugging in the electrical power supply).**
- 3. Plug the tonearm cable into the phono inputs of your preamplifier.**
- 4. Turn down the volume control to a minimum position (position 0).**
- 5. Plug the mains power cord into your electrical power supply.**

Our tip for mounting the cartridge:

Choose a bright workplace and good tools, and take your time so you can concentrate.

3. Adjustment of the tracking force

Carefully remove the stylus guard from the cartridge by grasping it with your thumb and forefinger and gently pulling it forward.

The correct tracking force of your cartridge can be found in the technical data in this user manual. Please only use these values, since if the tracking force is too light (1g or less) the cartridge could jump out of the record groove and damage the needle.

However, you should never set a tracking force of more than 5g as this could cause damage to the diamond and thus to the cartridge.

In the event that it is not possible to set the optimal tracking force due the cartridge being too light, you should use a spacer plate available from your **Clearaudio** importer/dealer.

Further valuable information for the correct adjustment of your cartridge can be found in the respective user manual of the turntable and/or tonearm manufacturer.



4. Special instructions

- Before playing a record, please remove all dust and dirt from the record's surface using a quality cleaning device. For the best results, a record cleaning machine should be used.
Ask your dealer about **Clearaudio**'s record cleaning machines.
- Always keep the stylus tip clean. When dirt is allowed to build up and records are played with a dirty or clogged stylus, a buzzing noise may be heard. Use a high quality cleaning brush or **Clearaudio** cleaning fluid to clean the stylus tip. Be extremely careful and always brush only from back to front. When using a liquid e.g. from **Clearaudio** or other organic cleaner, always take care not to spill any on the cartridge body. Make sure the liquid only contacts the stylus tip or boron cantilever.
- Please note:
Never disconnect your tonearm cable from your pre-amplifier while your unit is still on. Please switch your pre-amplifier off before starting to disconnecting your tonearm connectors from the phono inputs of your pre-amplifier.
- Always use the original packaging when shipping the cartridge and secure the stylus guard with a rubber band.
- If any service or repair to a **Clearaudio** product is necessary, please contact your dealer / distributor.
We can advise you of your nearest service location.

User manual / Bedienungsanleitung

Important - please note:

Do not try to remove the stylus assembly yourself.
Please contact your dealer / distributor.

Any damage caused by failure to follow the advice given in the **Clearaudio** user manual will invalidate the product warranty.

Clearaudio will assume no liability for any such damage.

PLEASE RETAIN ALL ORIGINAL PACKAGING.

You will need it if this unit has to be transported and/or shipped.

Any further questions you may have about your product should be directed to your dealer or distributor.

Clearaudio wish you a much enjoyment of your music!



Loving music

User manual / Bedienungsanleitung

5. Technical data

Total mass:	9.0g (\pm 1g)
Frequency response:	20Hz - 20kHz
Output voltage (1kHz, 5cm/s):	\sim 3.6mV
Channel separation (1kHz):	30dB
Channel balance (1kHz):	0.2dB
Tracking ability:	90 μ m
Recommended tracking force:	2.4g (\pm 0.3g)
Coil impedance (1kHz):	0.66k Ω
Coil inductance:	400mH
Load resistance:	47k Ω
Load capacitance:	100pF
Cantilever / stylus shape:	Boron / Gyger S double polished
Compliance:	17 μ /mN
Cartridge body:	Ebony wood with German Silver inlay
Manufacturer warranty:	2 years